

## 选择通过驱动开钱箱功能图示





Cash Select :钱箱选择  
NO Cash Drawer :不开钱箱.  
Cash Drawer Before Printing :打印之前开钱箱.  
Cash Drawer After Printing :打印之后开钱箱.